




OPEN CAMERA TO VIEW INSTRUCTIONS
-OR-
WWW.SSPGEAR.COM/
END-USER-INSTRUCTIONS

PROGRAMMING MODE

1. PRESS POWER BUTTON. THE MARK SB WILL START WITH THE PREVIOUS SELECTED PROGRAM.
2. **SKIP TO STEP 5 IF PROGRAMMING A TACTICAL MARK SB.** PRESS & HOLD THE POWER BUTTON FOR 10 SECONDS. LEDs WILL TURN ON SOLID RED.
3. PRESS POWER BUTTON TO CYCLE THROUGH COLOR OPTIONS. (RED, ORANGE, YELLOW, GREEN, BLUE, WHITE, PURPLE, PINK).
4. PRESS & HOLD THE POWER BUTTON FOR 5 SECOND TO SAVE COLOR SELECTION.
5. LEDs WILL FLASH RAPIDLY TO INDICATE THE MARK IS READY FOR PROGRAMMING.
6. CYCLE THE POWER BUTTON. THE NUMBER OF FLASHES INDICATE THE PROGRAM NUMBER.
7. PRESS & HOLD THE POWER BUTTON FOR 5 SECS. LEDs WILL BE SOLID FOR 2 SECS TO CONFIRM PROGRAM SELECTION.

THE UNIT WILL TIME OUT AFTER 5 SECS IF NO PROGRAM IS SELECTED.

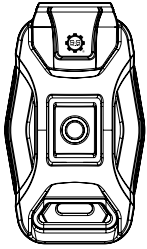


END USER INSTRUCTIONS

©2024 S&S Precision, LLC | 03252024

PROGRAMS

 TACTICAL



ADVENTURE

PROGRAM	IR			OVERT				
	PRESS 1	PRESS 2	PRESS 3	PRESS & HOLD 3 SECS	PRESS 2	PRESS 3	PRESS 4	PRESS 5
1	IR STROBE LOW VIBE 1X	IR STROBE HIGH VIBE 3X	OFF	GREEN STEADY ON	GREEN STEADY ON + WHITE STROBE	OFF		
2	IR STROBE LOW VIBE 1X	OFF		BLUE STEADY ON	RED STEADY ON	GREEN STEADY ON	GREEN / RED ALTERNATE	OFF



PROGRAM	PRESS 1	PRESS 2	PRESS 3	PRESS 4	PRESS 5
1	STEADY ON	OFF			
2	STROBE HIGH	OFF			
3	STEADY ON	STROBE HIGH	OFF		
4	1/4 POWER	1/2 POWER	3/4 POWER	MAX POWER	OFF

KEY



- OVERT X=COLOR
- IR
- VIBE 1X
- VIBE 3X
- STEADY ON
- STROBE LOW
- STROBE HIGH

MOUNTING

CLIP

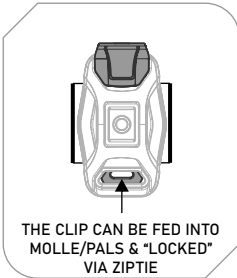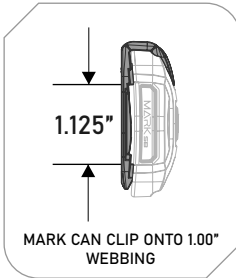


BUNGEE

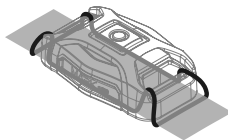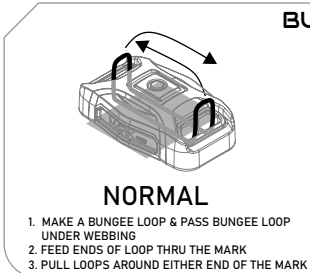

IN LINE


1. MAKE A BUNGEE LOOP & FEED WEBBING THRU LOOP
2. FEED BUNGEE DOWN THRU ONE END OF THE MARK & ROUTE THRU OPPOSITE END OF THE MARK
3. FEED OTHER END OF WEBBING THRU BUNGEE LOOP

VELCRO

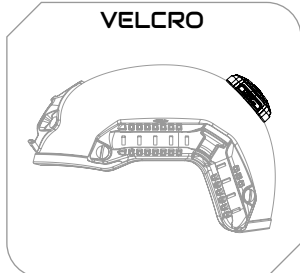


BATTERY INSTALLATION

1

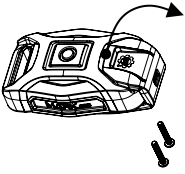


REMOVE CLIP BY REMOVING SCREWS

2

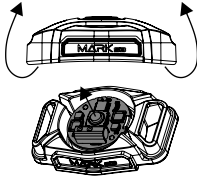

PEEL END OF HOUSING & REMOVE ELECTRONICS

 3




INSTALL BATTERIES (2X)

4



INSERT ELECTRONICS INTO BASEPLATE. ORIENT BOARD NOTCH WITH BASEPLATE NOTCH.

5

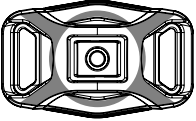

REINSTALL HOUSING ONTO BASEPLATE & PRESS IN THE AREA INDICATED ABOVE TO ENSURE WATERTIGHT SEAL.

NOTES

-DURACELL CR2032s ARE RECOMMENDED FOR OPTIMAL PERFORMANCE AND RUNTIME

LOW BATTERY INDICATION:

-TACTICAL MODEL WILL VIBRATE 3X PRIOR TO ENTERING SUBSEQUENT MODE

-ADVENTURE MODEL WILL FLASH 3X PRIOR TO ENTERING SUBSEQUENT MODE

-IT MAY BE NECESSARY TO PRESS THE BATTERY CONTACT BACK INTO PLACE AFTER INSERTING FRESH BATTERIES