



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:


Frag Pouch

PART NUMBER:

PFRP-FP



1 **For Non-Standard MOLLE/PALS (ONLY)**
Insert MOLLE/PALS strap into top thin slot of pouch located directly below MOLLE/PALS strap (look under label), and back out the thin slit 1/2" below the top slot.

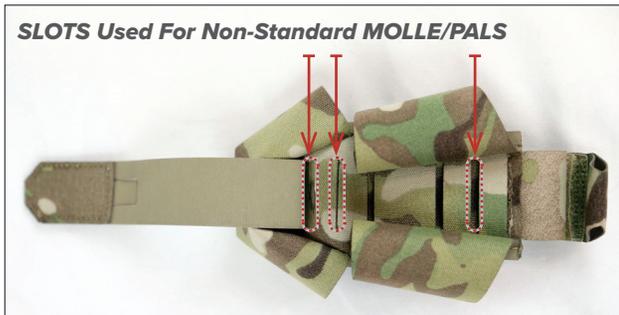

2 Weave MOLLE/PALS strap into the MOLLE/PALS of the carrier.



3 **For Non-Standard MOLLE/PALS (ONLY)**
Secure MOLLE/PALS strap by tucking it back into the MOLLE/PALS pouch slot 1/2" above the bottom of the pouch.



3A. For Standard MOLLE/PALS (ONLY) Secure MOLLE/PALS strap by tucking it back into the bottom of the MOLLE/PALS pouch.

OPEN CAMERA TO VIEW USER INSTRUCTIONS OR VISIT WWW.SSPGEAR.COM/END-USER-INSTRUCTIONS

