

PRODUCT NAME:

Smoke Grenade Pouch


PART NUMBER: **PFRP-SG**





For Non-Standard MOLLE/PALS (ONLY)

Insert MOLLE/PALS strap into top thin slot of pouch located directly below MOLLE/PALS strap (look under label), and back out the thin slit 1/2" below the top slot.

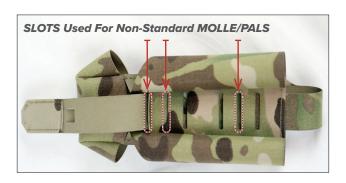










Weave MOLLE/PALS strap into the MOLLE/PALS of the carrier.

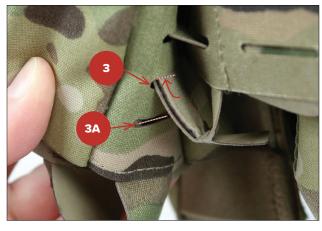



For Non-Standard MOLLE/PALS (ONLY)

Secure MOLLE/PALS strap by tucking it back into the MOLLE/PALS pouch, 2 slots up from the bottom of pouch.



3A. For Standard MOLLE/
PALS (ONLY) Secure MOLLE/
PALS strap by tucking it back
into the MOLLE/PALS pouch,
1 slots up from the bottom
of pouch.

OPEN CAMERA TO VIEW USER
INSTRUCTIONS OR VISIT
WWW.SSPGEAR.COM/
END-USER-INSTRUCTIONS



PART OF THE OSS REDUX SYSTEM ©2021 S&S Precision, LLC | 05062021