



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

PF-R™ PlateFrame Redux

PART NUMBER:

PFR-000

PACKAGE INCLUDES:




Remove from box and separate the front of the PF-R from the back by disconnecting the shoulder strap Velcro. (The back of the PF-R has the drag handle and cummerbunds)



Lay the front PF-R face down and lay out completely open.

INSERTING ARMOR PLATES

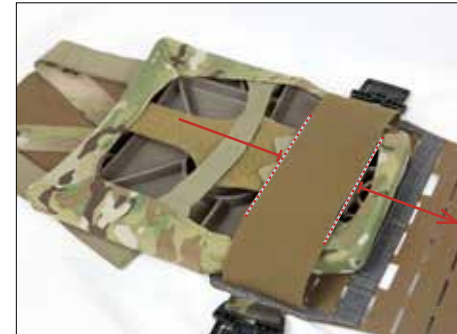

Insert Armor Plate under elastic band from the bottom and line bottom of Armor Plate with bottom of Tegrise stiffener frame.



Fold shoulder strap flap up and secure corners with velcro straps, by unrolling velcro.




END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:


PF-R™ PlateFrame Redux

PART NUMBER:

PFR-000

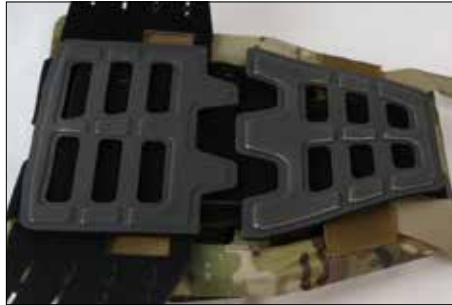

Attach (optional) Comfort Foam to the Velcro on the front panel.

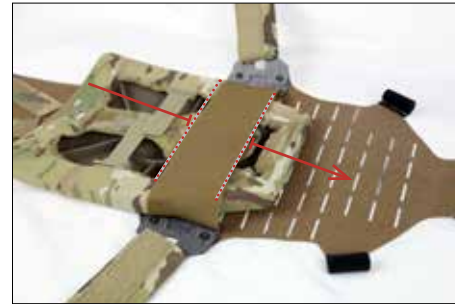

Close by folding top flap down. Ensure shoulder straps are centered up. Readjust if necessary.



Lay the back PF-R face down and lay out completely open.



Insert Armor Plate under elastic band from the bottom and line bottom of Armor Plate with top of the trapezoid shaped cutout in PF-R.



Fold shoulder strap flap up and secure corners with velcro straps.




END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

PF-R™ PlateFrame Redux


PART NUMBER:

PFR-000

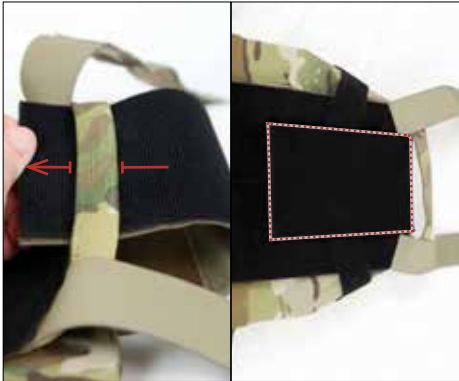

10

Close Top by passing top flap under drag handle and folding down. Ensure shoulder straps are centered up. Readjust if necessary.

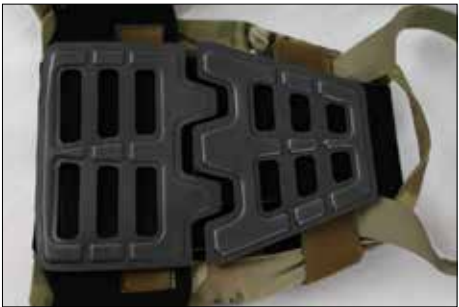


11

Attach (optional) Comfort Foam to the Velcro on the back panel.



Squeeze shoulder strap with velcro hooks to slide straps through sleeves easier.

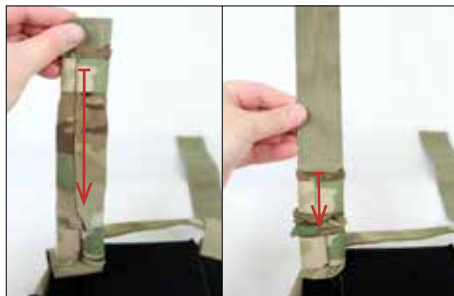

12

Slide shoulder strap sleeves onto the shoulder straps connected to the back of the PF-R. Bunch them up tight to the drag handle.



13

Reconnect the front of the PF-R to the back with the shoulder strap Velcro.



14

Slide shoulder strap sleeves back onto the connected PF-R shoulder straps.





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

PF-R™ PlateFrame Redux

PART NUMBER:

PFR-000

AUTOFIT CUMMERBUND ADJUSTMENT



Tighten or loosen Autofit Cummerbund flat friction lock and bungee cord to get the desired fitment.



Unvelcro Autofit Cummerbund sleeve

CARE AND MAINTENANCE

To clean, hand wash with mild detergent and rinse with fresh water. Let air dry out of the sun. Store in a cool and dry environment.

Check cummerbund attachment point hardware. If hardware is loose, ensure to use thread locker and hand tighten. Always reapply thread locker if changing out cummerbunds or replacing hardware.

OPEN CAMERA TO
VIEW USER INSTRUCTIONS OR VISIT
[WWW.SSPGEAR.COM/
END-USER-INSTRUCTIONS](http://WWW.SSPGEAR.COM/END-USER-INSTRUCTIONS)

