



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Rebreather Attachment Kit (RAK) - PF-M™

PART NUMBER:
PFMA-RAK01

RAK PACKAGE INCLUDES: ATTACH CUMMERBUND BUCKLE




- A. Shoulder Buckle (x2)
- B. Cummerbund Buckle (x2)
- C. Rebreather Conversion Strap (x4)



- 1** Identify preferred MOLLE/PALS column to insert the RAK Cummerbund Buckle. It is important to note the MOLLE/PALS column can still be used to mount a pouch once the RAK Cummerbund buckle is installed.



- 2** Disconnect the cummerbund from the PF-M front panel and detach the inner Velcro panel.
- 3** With the buckle facing the front of the carrier, feed the Velcro strap up through the top two MOLLE/PALS slots at the desired location.

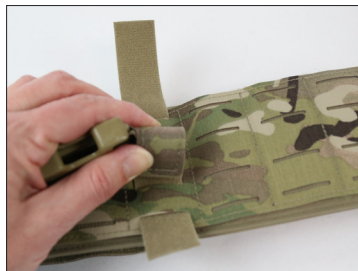

- 4** Feed bottom strap through the bottom two MOLLE/PALS slots and pull through.



- 5** Wrap Velcro straps over the edges of the cummerbund as shown.



- 6** With the straps connected as shown, reattach the inner Velcro panel on the cummerbund.



- 7** Attach Rebreather Conversion Strap to the cummerbund buckle.



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Rebreather Attachment Kit (RAK) - PF-M™

PART NUMBER:
PFMA-RAK01

ATTACH RAK SHOULDER STRAP BUCKLE TO PF-M™



Shoulder strap shown above



1

Remove shoulder pad.
Detach front Velcro flap.



2

Unweave the end of the
strap back through the
male buckle slots. And
detach rear Velcro flap.



3

Weave end of shoulder
strap up through first slot
as shown.



4

Weave end of shoulder
strap back down
through second slot.



5

Slide buckle along the
strap until the buckle
is sitting close to the
center of strap.



6

Retain one wrap Velcro
strap with rear Velcro
flap.



7

Re-weave end of
shoulder strap through
the male buckle and
secure Velcro.



8

Re-attach shoulder pad
as shown. The female
side-release buckle
should stick out through
the center of the shoulder
pad for easy attachment
to the rebreather buckle.



9

Attach Rebreather
Conversion Strap to the
shoulder buckle.




END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Rebreather Attachment Kit (RAK)


PART NUMBER:
PFMA-RAK01

ATTACH REBREATHER SYSTEM TO THE PLATEFRAME®

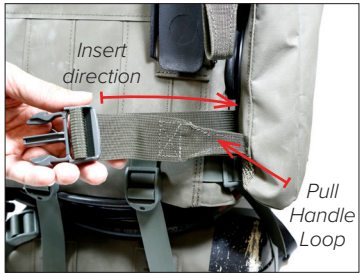


1

From the back of the rebreather assembly to the front, insert strap (tail end first) through the gap shown.

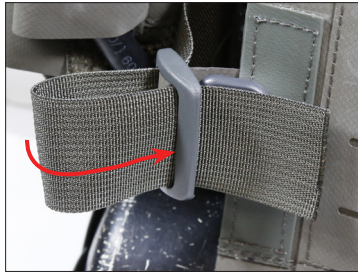


2

Flip the assembly over. Insert the tail end of the strap through the Tri-Glide Buckle as shown.

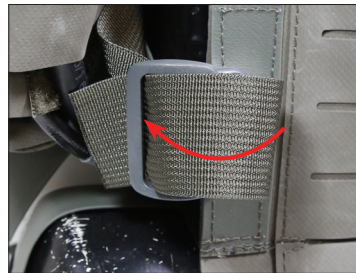

3

Weave the bitter end of the strap back into the tri-glide. This will "lock" the strap into place. Repeat this step for the opposing cummerbund strap.

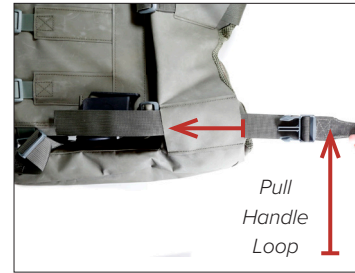

4

The following steps will use the strap shown above. On the back of the rebreather system, insert the shoulder attachment strap through the sewn slot as shown.



5

Insert the strap through the Tri-Glide buckle as shown.



6

Weave the bitter end of the strap back into the tri-glide. This will "lock" the strap into place. Repeat this step for the opposing cummerbund strap.



7

Connect the cummerbund attachment buckles and straps together. REPEAT for the opposite side.
NOTE: Shown on S&S Precision PlateFrame®.



8

Connect both shoulder strap buckles. The PlateFrame™ Rebreather Attachment System is now fully assembled.
NOTE: Shown on S&S Precision PlateFrame®.