



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Contoured Side Armor Pouches

PART NUMBER:
PFMP-SPPCXX

MOUNTING CONTOURED SIDE ARMOR POUCHES TO THE PF-M™



1

PF-M Back Armor Wings required. A complete set of PF-M Contoured Side Plate Armor Pouches will include:

- Front Armor (2X) - Left Front (LF), Right Front (RF)
- Rear Armor (2X) - Left Rear (LR), Right Rear (RR)

2

Disconnect the rear PF-M from the front. Place the rear Boltaron frame down on a flat surface with the internal Tegrise frame face up.

Locate the Left Rear Armor and weave the MOLLE/PALS into the PF-M Back Wing to secure the armor into place.

When mounted correctly the PF-M Back Wing will not be visible. **Repeat for the Right Rear Armor.**



3

Locate the front PF-M. Place the front Boltaron frame face down on a flat surface with the internal Tegrise frame is face up. Locate the Left Front Armor. Mount the armor to the PF-M's internal front wing.

The armor should be positioned between the PF-M cummerbund male buckle and the internal front wing. The front armor pouches have a MOLLE/PALS field to mount any additional gear or pouches. **Repeat for the Right Front Armor.**

4

Once all four side plate pouches have been mounted on to the wings, and armor inserted, that the front side plate pouches overlap on top of the back side plate pouches.




END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Contoured Side Armor Pouches

PART NUMBER:
PFMP-SPPCXX

MOUNTING CONTOURED SIDE ARMOR POUCHES TO THE PF-R™

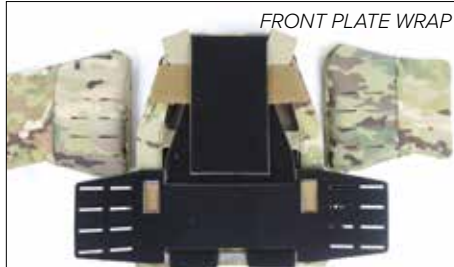

1 PF-R Back Armor Wings required. A complete set of PF-R Contoured Side Plate Armor Pouches will include:

- Front Armor (2X) - Left Front (LF), Right Front (RF)
- Rear Armor (2X) - Left Rear (LR), Right Rear (RR)

2 Disconnect the rear PF-R from the front. Place the Front Plate Wrap down on a flat surface with the internal Tegriss frame face up.

Locate the Left Rear Armor and weave the MOLLE/PALS into the PF-R Back Wing to secure the armor into place.

When mounted correctly the PF-R Back Wing will not be visible. *Repeat for the Right Rear Armor.*



3 Locate the front PF-R. Place the Front Plate Wrap face down on a flat surface with the internal Tegriss frame is face up. Locate the Left Front Armor. Mount the armor to the PF-R's internal front wing.

The armor should be positioned between the PF-M cummerbund male buckle and the internal front wing. The front armor pouches have a MOLLE/PALS field to mount any additional gear or pouches. *Repeat for the Right Front Armor.*



4 Once all four side plate pouches have been mounted on to the wings, and armor inserted, that the front side plate pouches overlap on top of the back side plate pouches.