



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:


Rebreather Attachment Kit (RAK) - MTH™

PART NUMBER:
MTH-RAK01


RAK PACKAGE INCLUDES: ATTACH CUMMERBUND BUCKLE



- A. Shoulder Buckle (x2)
- B. Cummerbund Buckle (x2)
- C. Rebreather Conversion Strap (x4)

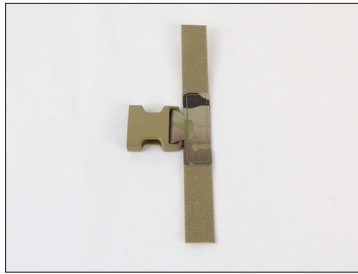


- 1** Identify preferred MOLLE/PALS column to insert the RAK Cummerbund Buckle. It is important to note the MOLLE/PALS column can still be used to mount a pouch once the RAK Cummerbund buckle is installed.

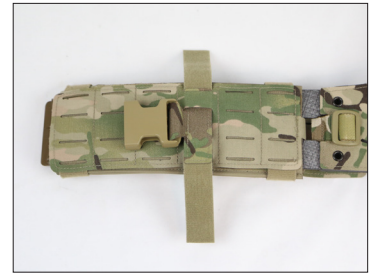

- 2** Disconnect the cummerbund from the MTH front panel and detach the inner Velcro panel.

- 3** With the buckle facing the front of the carrier, feed the Velcro strap up through the top two MOLLE/PALS slots at the desired location.

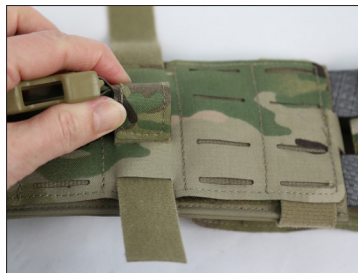

- 4** Feed bottom strap through the bottom two MOLLE/PALS slots and pull through.

- 5** Wrap Velcro straps over the edges of the cummerbund as shown.

- 6** With the straps connected as shown, reattach the inner Velcro panel on the cummerbund.

- 7** Attach Rebreather Conversion Strap to the cummerbund buckle. Repeat with other side.



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Rebreather Attachment Kit (RAK) - MTH™

PART NUMBER:
MTH-RAK01

ATTACH RAK SHOULDER STRAP BUCKLE TO MTH™




Shoulder strap shown above




1

Remove comfort foam and shoulder pad from the MTH. Turn the carrier over.

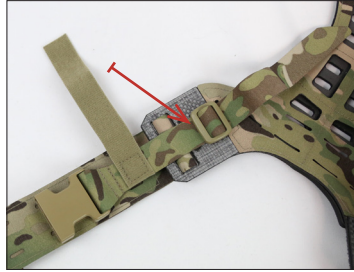


2

Line up shoulder buckle as shown above. Weave the end of the strap through the smaller buckle slots.

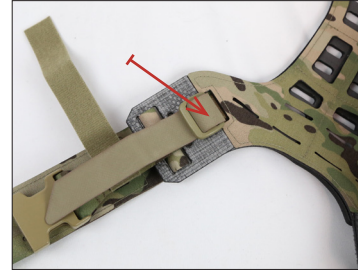

3

Weave end of strap back through the small buckle as shown.

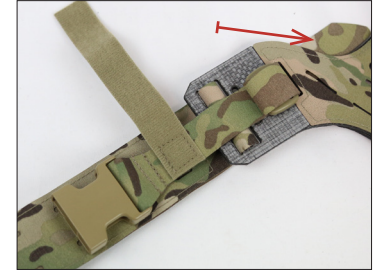

4

Weave end of strap through the back of the carrier and replace the comfort foam on top of the strap end.



5

Wrap the Velcro straps around the MTH shoulder strap.



6

Attach Rebreather Conversion Strap to the shoulder buckle. Repeat steps 1-6 for other shoulder strap.



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Rebreather Attachment Kit (RAK)

PART NUMBER:


MTH-RAK01

ATTACH REBREATHER SYSTEM TO THE PLATEFRAME®



1

From the back of the rebreather assembly to the front, insert strap (tail end first) through the gap shown.

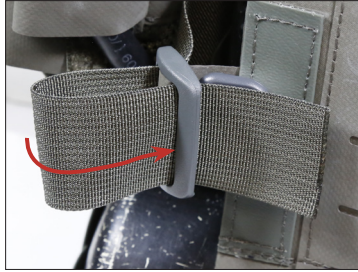


2

Flip the assembly over. Insert the tail end of the strap through the Tri-Glide Buckle as shown.



3

Weave the bitter end of the strap back into the tri-glide. This will "lock" the strap into place. Repeat this step for the opposing cummerbund strap.

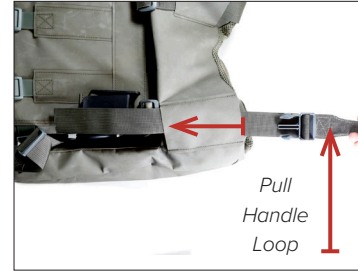

4

The following steps will use the strap shown above. On the back of the rebreather system, insert the shoulder attachment strap through the sewn slot as shown.



5

Insert the strap through the Tri-Glide buckle as shown.



6

Weave the bitter end of the strap back into the tri-glide. This will "lock" the strap into place. Repeat this step for the opposing cummerbund strap.



7

Connect the cummerbund attachment buckles and straps together. REPEAT for the opposite side.
NOTE: Shown on S&S Precision PlateFrame®.



8

Connect both shoulder strap buckles. The PlateFrame™ Rebreather Attachment System is now fully assembled.
NOTE: Shown on S&S Precision PlateFrame®.