



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

NavBoard® FlipLite™

PART NUMBER:

NB-FL01XX

FLIPLITE™ PACKAGE INCLUDES:



Optional FLAP
(FlipLite™ Accessory Pack)

PREPARE VELCRO STRAPS



1 Locate the two Velcro straps on the upper panel.




2 Detach the top most Velcro strap as shown above. This exposes the Velcro strap (black) used to weave into webbing or the PlateFrame™.



3 Detach the black Velcro strap.



4 Repeat steps 2 and 3 on the opposing side.

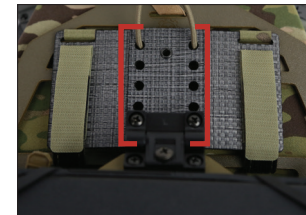

5 The holes provided on the adapter are for adjusting the height of the Navboard™ FlipLite. Simply remove the hinge screws and reposition the platform to your desired height.



END USER INSTRUCTIONS - READ BEFORE USE


PRODUCT NAME:

NavBoard® FlipLite™


PART NUMBER:

NB-FL01XX


ATTACHING FLIPLITE™ TO PLATEFRAME MODULAR™ (PF-M™)

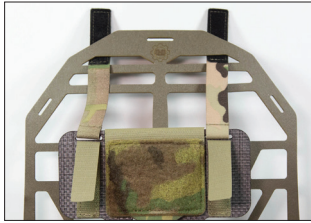


1 Begin weaving the MOLLE/PALS straps through the top most row of the PF-M™.

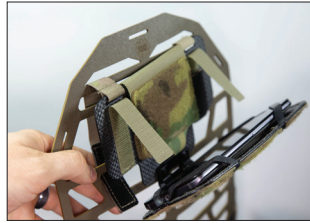

2 As shown from the side view, continue weaving the Velcro strap.

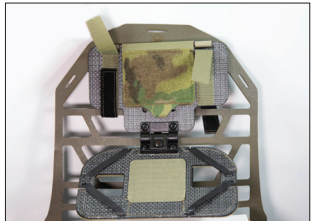

3 Adhere the Velcro straps back into place and secure with the top most Velcro strap as shown above.

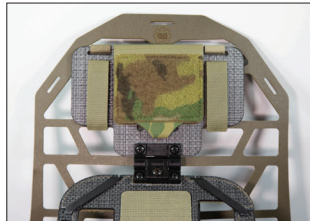


4 The FlipLite™ is now attached and secured.


ATTACHING FLIPLITE™ TO THE CR-M™ ADMIN PANEL



1 Begin with CR-M™ and attached Admin Panel.

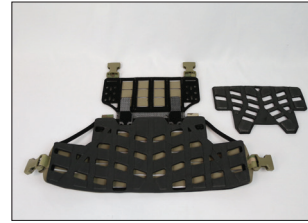

2 Remove comfort foam from the back of the two panels.

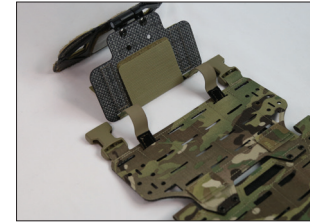

3 Begin weaving the MOLLE/PALS straps through the top most slots.



4 Pull tabs through fourth slot and fold down phone panel. Wrap black Velcro straps around panel.



5 Adhere the black Velcro straps into place and secure with the tan Velcro straps as shown above.



6 Lift the quick closure attachment and fold phone panel up. Fold the quick closure attachment over the phone panel.



7 The FlipLite™ is now attached and secured.



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

NavBoard® FlipLite™

PART NUMBER:

NB-FL01XX

ATTACHING ZIPLITE™ TO ADVANCED TACTICAL HARNESS (ATH™)



1 Remove comfort foam. Viewing the top of the ATH™, begin weaving the MOLLE/PALS straps through the top most slots.



2 Pull tabs through the bottom slots of the ATH™. Fold FlipLite down.



3 Adhere the black Velcro straps into place and secure with the tan Velcro straps as shown above.



4 Lift the quick closure attachment and fold phone panel up. Fold the quick closure attachment over the phone panel.



5 The FlipLite™ is now attached and secured.