



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Dry Bag

PART NUMBER:
DB-XXXXXXXX

PACKAGE INCLUDES EITHER:



A. 6" x 7" Dry Bag with
MOLLE/PALS Attachment

B. 8" x 10" Dry Bag with
MOLLE/PALS Attachment

C. Optional (8x10)
PlateFrame Adapter

D. Optional (8x10)
3 Mag Insert

ATTACHING DRY BAG WITH MOLLE/PALS STRAPS



1

Feed two center tabs
and outer straps into
same MOLLE/PALS field
row as shown.



2

Pull down on Dry Bag to
make sure it is properly
seated.



3

Weave MOLLE/PALS
straps normally.

LOCKING TAB



1

Attach the included
locking tab into the
Dry Bag's inner front
Velcro field.



2

To lock Dry Bag open,
attach G-Hook to sewn
loop on bottom front of
bag as shown.

ORAL TUBE



Inflate/Deflate by mouth to adjust
the pouch's buoyancy and ensure
the RF welded seams have not
been compromised.

OPTIONAL 3 MAG INSERT



Available in MultiCam or Black
Fits into the 8 x 10 Dry Bag



Shown with (MultiCam) 3 Mag Insert



END USER INSTRUCTIONS - READ BEFORE USE


PRODUCT NAME:

Dry Bag

WITH PLATEFRAME ADAPTER

PART NUMBER:
DB-810PFXX

ATTACHING PLATEFRAME ADAPTER TO 8 X 10 DRY BAG

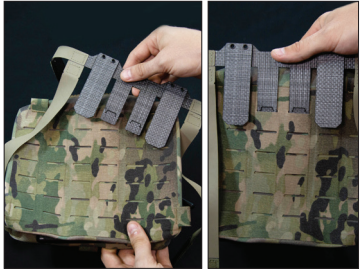

1

Attach the Dry Bag PlateFrame adapter to the rear of the Dry Bag. Insert two smaller tabs into the two center topmost MOLLE/PALS slots as shown.



2

Weave straps through outer top MOLLE/PALS slots as shown.



3

Pull straps back out through second row of MOLLE/PALS slots as shown.



4

Pull center tabs down through the 3rd MOLLE/PALS row. Bend center tabs out until locking features engage with MOLLE/PALS slots. Feed outer straps through 2nd to last MOLLE/PALS slot and back out through last slot row.



5

PlateFrame adapter should look as shown once tabs and straps are properly inserted and woven through MOLLE/PALS slots.

ATTACHING 8 X 10 DRY BAG TO PF-M™



1

Insert longer tabs through fourth row on the PF-M™ as shown on the diagram inset.



2

Remove PF-M™ inner foam pad. Fold adapter side flaps tightly around sides of PF-M™ and adhere to Velcro.



3

Pull the adapter bottom flaps tightly around bottom of PF-M™ and adhere to Velcro.



4

Reattach inner comfort foam.



5

Dry bag is fully attached to the PF-M™.