



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Full RAP

RAPID ATTACHMENT PANEL (RAP)

PART NUMBER:

PFMA-RAPFOXXXX




1

Remove comfort foam from the interior of the PF-M™. Insert fang tabs over the top of the PF-M™ between the frame and the armor.



2


Push fangs down until they stop. Tuck top tabs between the frame and the armor.

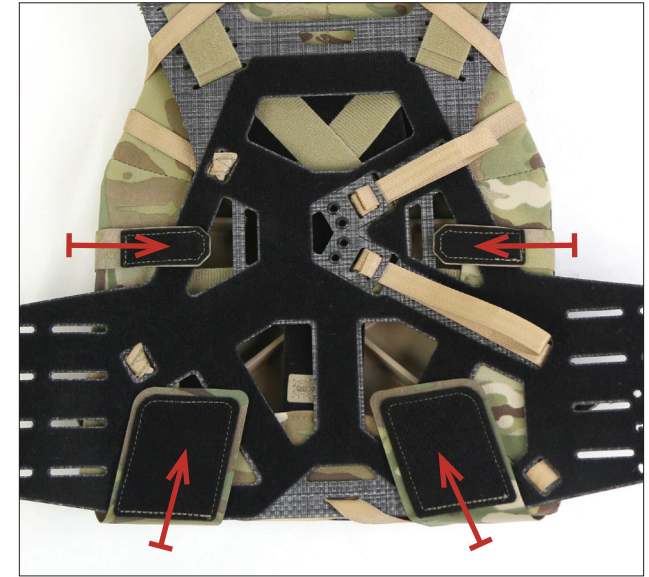

3

Unroll the bottom Velcro straps and wrap it around to the interior of the carrier. Secure bottom and side Velcro straps to the interior field of Velcro on carrier. Reattach comfort foam.

BACK VIEW OF FULL RAP

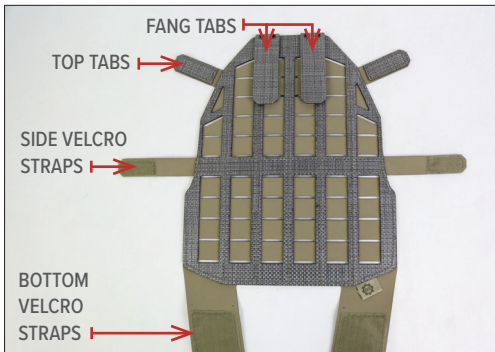

FINAL FRONT VIEW OF PF-M™ WITH FULL RAP



OPEN CAMERA TO
VIEW USER INSTRUCTIONS OR VISIT
[WWW.SSPGEAR.COM/
END-USER-INSTRUCTIONS](http://WWW.SSPGEAR.COM/END-USER-INSTRUCTIONS)

