



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Pack-M

PART NUMBER:

PM-0001

PACKAGE INCLUDES:



FOR BACKPACK USE (SEE PAGE 2):

Fangs and straps will be stowed within insert pocket.

FOR CARRIER USE (SEE PAGES 3-4):

- 2 Fangs (exposed)
- 2 MOLLE/PALS straps (extended)
- 4 Velcro One-Wrap straps

OPTIONAL STRAPS (SEE PAGE 5):

Allows user to adapt the Pack-M to other plate carriers





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Pack-M

PART NUMBER:

PM-0001

ATTACHING SHOULDER STRAPS FOR BACKPACK USE



1

Locate the right-hand side shoulder strap and unroll the Velcro One-Wrap strap. The sternum strap should face towards the center of the Pack-M.

NOTE: The right-side shoulder strap can be identified via the sternum strap male side-release buckle.



2

Insert the Velcro One-Wrap strap into the laser cut slot located on the top edge of the Pack-M's back panel. Open the insert pocket and locate the One-Wrap strap. Pull the strap until the shoulder pad is seated flush against the laser cut slot and secure the One-Wrap in place.



NOTE: The insert pocket features a Velcro hook and loop field on opposing faces. The hook and loop field creates a sandwich in which the shoulder strap's One-Wrap tab will be held securely in place under load.




3

Repeat step 2 with the left-hand side shoulder strap.



4

Locate the tri-glide buckle on the bottom left-hand side of the pack. Route the shoulder strap 1" webbing through the buckle. Adjust the shoulder strap to preferred length and anchor the strap in place by routing the bitter end of the webbing back through the buckle.

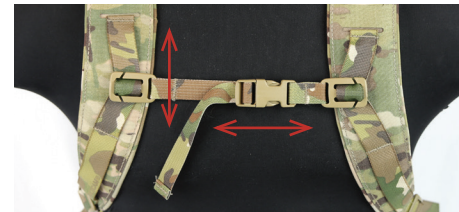

5

Adjust sternum and shoulder straps as needed.





END USER INSTRUCTIONS - READ BEFORE USE



PRODUCT NAME:

Pack-M on PF-M™

PART NUMBER:

PM-0001
(PF-M#: PFM-00XX)

ATTACHING VIA VELCRO STRAPS AND FANGS

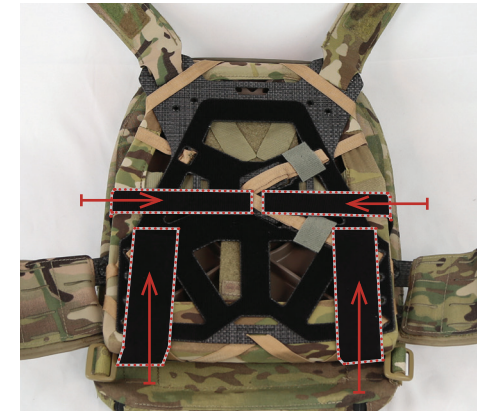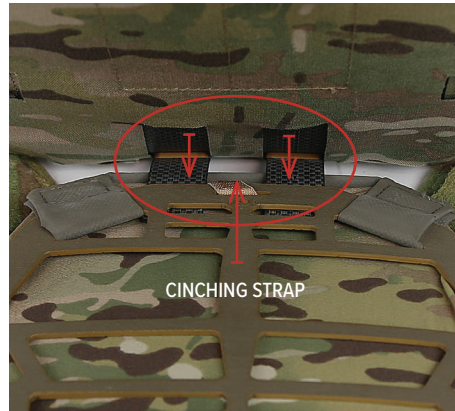

1

Insert Panel Fangs should be exposed. Side and bottom Velcro One-Wrap straps should be routed out of the pack's back panel and insert pocket.

2

Insert the Fangs on the top edge of the PF-M™ exterior panel, so that the Fangs are situated between the plate and exterior panel.

3

Flip the PF-M™ over with the Pack-M underneath, remove the Comfort Foam exposing the Velcro field.

4

Wrap the Pack-M Velcro One-Wrap straps around the PF-M™ bottom and sides. Secure One-Wrap to the PF-M's to the exposed Velcro field.

NOTE: The PF-M™ cinching strap should be between the Fangs.



5

Reattach the Comfort Foam to the PF-M™.

NOTE: Follow instructions above for the PF-R™.



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Pack-M on Other Carriers

PART NUMBER:

PM-0001

ATTACHING VIA MOLLE/PALS STRAPS AND FANGS

BACK



1

Fangs should be out and two MOLLE/PALS straps should be out of MOLLE/PALS slots (circled).



2

Insert the fangs at the top of the back plate, so that the fangs fit into the top two center MOLLE/PALS slots.



3

Route the MOLLE/PALS straps in and out of the MOLLE/PALS slots on the carrier.



4

Continue routing strap and tuck the end tab into the bottom of the PACK-M. Repeat with second strap.

NOTE: PF-R™ shown above for carrier example.

OPEN CAMERA TO
VIEW USER INSTRUCTIONS OR VISIT
[WWW.SSPGEAR.COM/
END-USER-INSTRUCTIONS](http://WWW.SSPGEAR.COM/END-USER-INSTRUCTIONS)





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

Pack-M Optional Straps

PART NUMBER:

PM-0001

ATTACHING OPTIONAL SHOULDER AND SIDE STRAPS



1

For backpack use, fangs should be tucked into the MOLLE/PALS slots. Choose first shoulder strap and unroll the Velcro strap.



2

Follow shoulder strap instructions on page 2 for the optional shoulder straps.



3

Side straps feed through the bottom side buckle. Route up through buckle.



4

Route down through buckle.



5

Route back over and through buckle to lock down strap.



6

Repeat with second side strap.



7

Attach backpack to carrier via buckles on top and sides. Adjust to fit.

