PART NUMBER:

LC-0001

PACKAGE INCLUDES:



ATTACH TO PF-M™ WITH MOLLE/PALS STRAPS



Lay back plate flat. Insert the stiffened tabs of the MOLLE/PALS strap from the LAAW Clip™ into the right side of the PF-M (if right handed).




Weave MOLLE/PALS
strap into the LAAW Clip™
and the frame slots of the
product as shown above.
Tighten to secure. Repeat
for each strap.



To lock in place, tuck stiffened tab under the bottom slot of the frame.



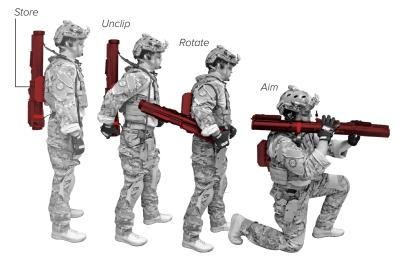



LAAW Clip is attached to the back plate.



Insert the LAW Rocket into the LAAW Clip™ in a secure vertical position.