





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

# Armor Harness

PART NUMBER:  
**CRM-AH01XX**

## ATTACH HARNESS TO ARMOR PLATE

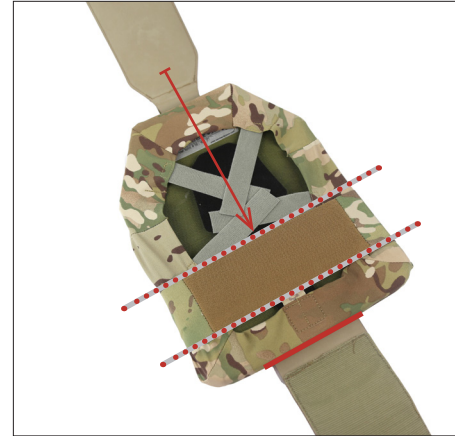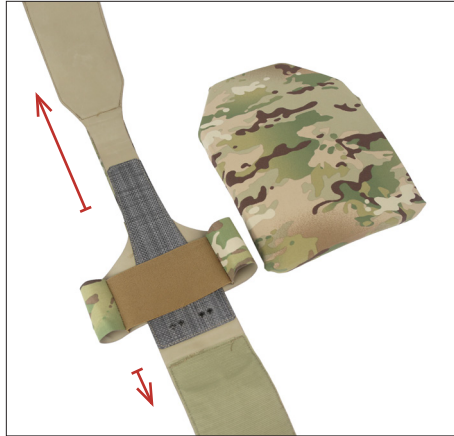

**1** Position top of Harness next to top of Armor Plate. Armor Plate example is covered in optional Multi-Cam SOC (PFS-S001XX).

**2** Turn Armor Harness over and open top and bottom Velcro straps.

**3** Turn Armor Plate over and slide into center elastic band. Pull band down to bottom section of Armor Plate. Bottom edge of the grey stiffener should be lined up to the bottom edge of the Armor Plate. Bottom seam of Armor Harness should be right below the Armor Plate.

**4** Fold down top Velcro strap. Fold up bottom Velcro strap. Pull to create a tight connection.



optional Multi-Cam  
SOC (PFS-S001XX)  
BACK



shown without  
Multi-Cam SOC  
FRONT





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

# Armor Harness on ATH™


PART NUMBER:  
**CRM-AH01XX**

## ATTACH ARMOR PLATE TO ABDOMINAL PANEL



**1**

Attach Armor Harness to  
Armor Plate (see page 1).

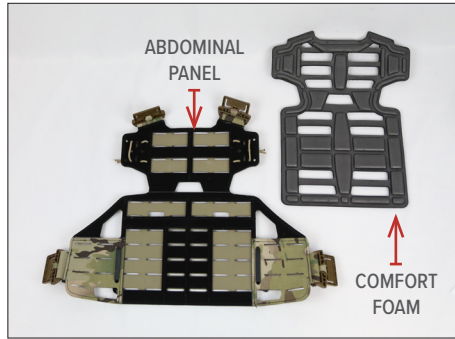


**2**

Remove the Comfort Foam from  
the Abdominal Panel.




**3**

Insert the Velcro tabs into the two  
middle bottom laser cut MOLLE/  
PALS slots of the Abdominal Panel.  
The front of the Armor Harness  
should be facing the back of the  
Abdominal Panel.

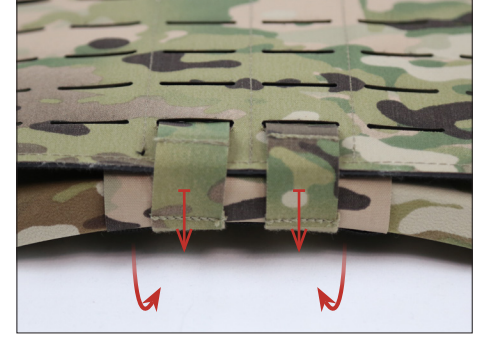

**4**

Pull Velcro tabs tight and attach to  
the back of the Armor Harness.

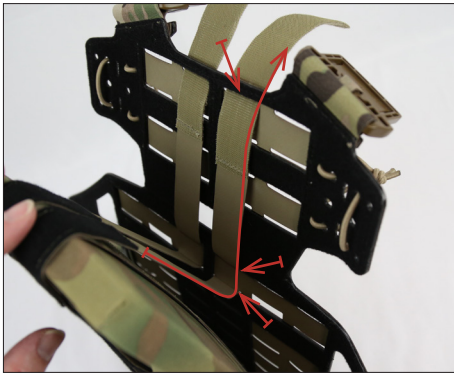

**5**

Take the first top strap and route  
through the middle and the top  
center MOLLE/PALS slots of the  
Abdominal Panel. Follow the  
same directions with the second  
top strap.



**6**

Once both top straps have been  
routed, pull tight so that the plate  
is secured against the Abdominal  
Panel and attach the top straps to  
the back of the Armor Harness.



Final front harness view.





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:

# Armor Harness on ATH™

PART NUMBER:  
**CRM-AH01XX**

## ATTACH ARMOR PLATE TO BACK HARNESS



**1**

Attach Armor Harness to Armor Plate (see page 1).




**2**

Remove the Comfort Foam from the Back Harness.



**3**

Insert the Velcro tabs into the two middle bottom laser cut MOLLE/PALS slots. The front of the Armor Harness should be facing the back of the Back Harness.

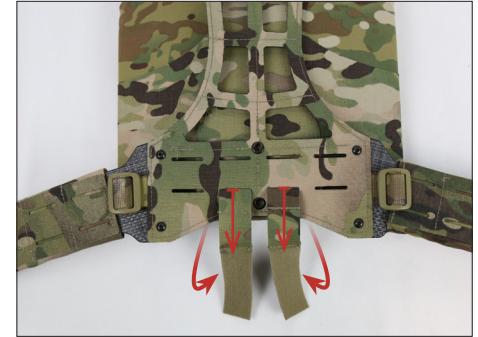

**4**

Pull Velcro tabs tight and attach to the back of the Armor Harness.



**5**

Take the first top strap and route through and around the top center slot of the Back Harness.



**6**

Follow the same directions with the second top strap.



**7**

Once both top straps have been routed, pull tight so that the plate is secured against the Back Harness, and Velcro the top straps to the back of the Armor Harness.

