





PRODUCT NAME:

Armor Harness

PART NUMBER:
CRM-AH01XX

ATTACH HARNESS TO ARMOR PLATE

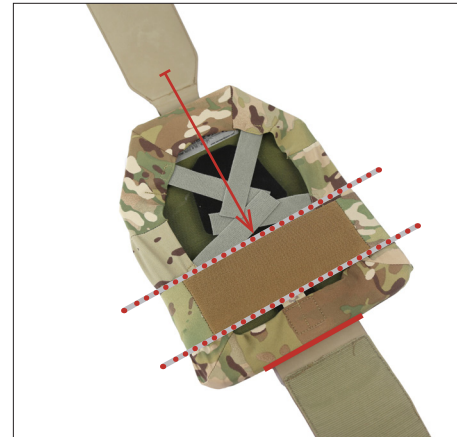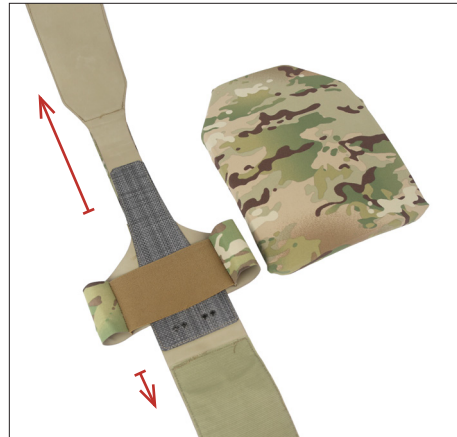

1 Position top of Harness next to top of Armor Plate. Armor Plate example is covered in optional Multi-Cam SOC (PFS-S001XX).

2 Turn Armor Harness over and open top and bottom Velcro straps.

3 Turn Armor Plate over and slide into center elastic band. Pull band down to bottom section of Armor Plate. Bottom edge of the grey stiffener should be lined up to the bottom edge of the Armor Plate. Bottom seam of Armor Harness should be right below the Armor Plate.

4 Fold down top Velcro strap. Fold up bottom Velcro strap. Pull to create a tight connection.



optional Multi-Cam SOC (PFS-S001XX)
BACK



shown without Multi-Cam SOC
FRONT





END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:


Armor Harness on CR-M™

PART NUMBER:
CRM-AH01XX

ATTACH A FRONT ARMOR PLATE TO ABDOMINAL PANEL



1 Attach Armor Harness to Armor Plate (see page 1).

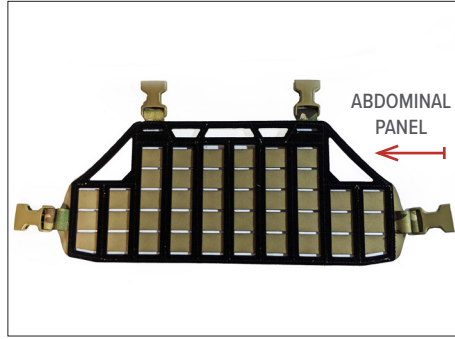


2 Remove the Comfort Foam (not shown) from the Abdominal Panel.




3 Insert the Velcro tabs into the two middle bottom laser cut MOLLE/PALS slots of the Abdominal Panel. The front of the Armor Harness should be facing the back of the Abdominal Panel.



4 Pull Velcro tabs tight and attach to the back of the Armor Harness.

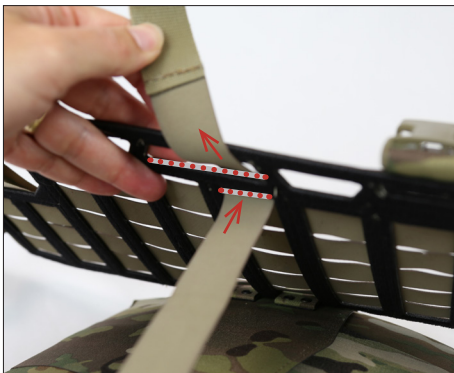

5 Take the first top strap and route through and around the top center MOLLE/PALS slot of the Abdominal Panel.

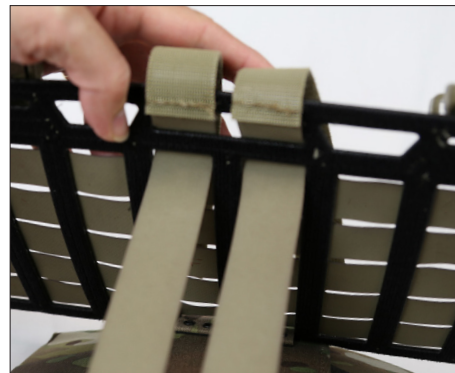

6 Follow the same directions with the second top strap.



7 Once both top straps have been routed, pull tight so that the plate is secured against the CR-M™, and attach the top straps to the back of the Armor Harness.



Final front harness view



PRODUCT NAME:


Armor Harness on CR-M™

PART NUMBER:
CRM-AH01XX

ATTACH A FRONT ARMOR PLATE TO ABDOMINAL PANEL WITH ADMIN PANEL



1 Attach Armor Harness to Armor Plate (see page 1).

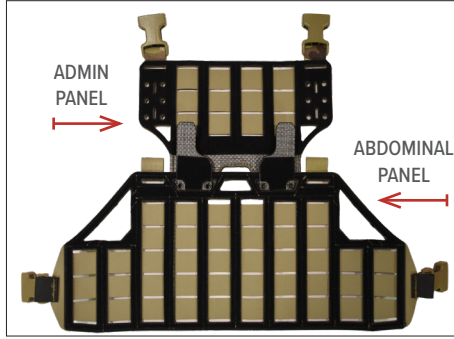


2 Remove the Comfort Foam (not shown) from both the Abdominal and Admin Panel.



3 Insert the Velcro tabs into the two middle bottom laser cut MOLLE/PALS slots of the abdominal panel. The front of the Armor Harness should be facing the back of the Abdominal and Admin Panel.



4 Pull Velcro tabs tight and attach to the back of the Armor Harness.

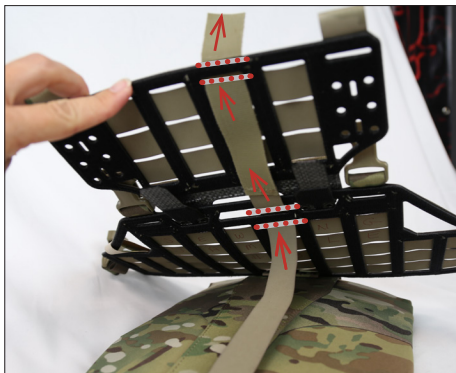

5 Take the first top strap and route through and around the top center MOLLE/PALS slot of the Abdominal Panel. Then, take the strap and route through the top right middle laser cut MOLLE/PALS slot of the Admin Panel.



6 Follow the same directions with the second top strap.



7 Once both top straps have been routed, pull tight so that the plate is secured against the CR-M™, and attach the top straps to the back of the Armor Harness.



Final front harness with admin panel view.



PRODUCT NAME:


Armor Harness on CR-M™

PART NUMBER:
CRM-AH01XX

ATTACH A BACK ARMOR PLATE



1 Attach Armor Harness to Armor Plate (see page 1).

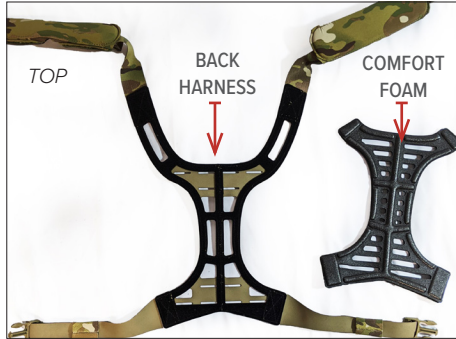

2 Remove the Comfort Foam from the Back Harness.



3 Insert the Velcro tabs into the two middle bottom laser cut MOLLE/PALS slots. The front of the Armor Harness should be facing the back of the Back Harness.



4 Pull Velcro tabs tight and attach to the back of the Armor Harness.



5 Take the first top strap and route through and around the top center slot of the Back Harness.



6 Follow the same directions with the second top strap.



7 Once both top straps have been routed, pull tight so that the plate is secured against the Back Harness, and Velcro the top straps to the back of the Armor Harness.



Final back harness view

