


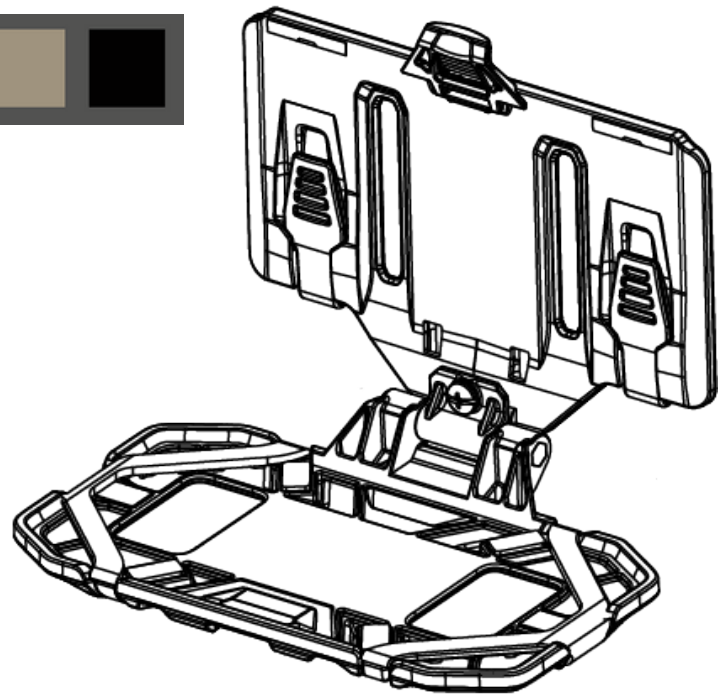

NAVBOARD®

Fliplrte™

- Enhanced durability and performance
- Molded with impact modified Nylon
- Case agnostic - fits smart devices up to 3.5" W x 6.75" L x 0.6875" D with or without case
- Enables users to utilize their preferred case
- Adjustable friction hinge
- Silicone smart device retention straps featuring internal ribbing to prevent the straps from peeling off the user's smart device
- Bungee lock auto-stows out of the way and does not interfere while using a smart device
- Attaches to 4 x 2 MOLLE/PALS field via two mounting straps
- Rapid donning / doffing
- Integrated belly band slots
- **Patents Pending Foreign & Domestic**



OPEN CAMERA TO VIEW
S&S PRECISION'S
PATENT INFORMATION
SSP-IP.COM

NOTE: NOT COMPATIBLE WITH
NAVBOARD® ZIPFLIP™ OR FLAP



User Configurations

ON CARRIERS



*NavBoard® FlipLite™
attached to PF-M™*



*NavBoard® FlipLite™
attached to PF-R™*

ON HARNESES



*NavBoard® FlipLite™
attached to CR-M™*



*NavBoard® FlipLite™
attached to ATH™*



*NavBoard® FlipLite™
attached to MTH™*




PRODUCT NAME:

NavBoard FlipLite

PART NUMBER:
NB-FL02XX

PACKAGE INCLUDES:

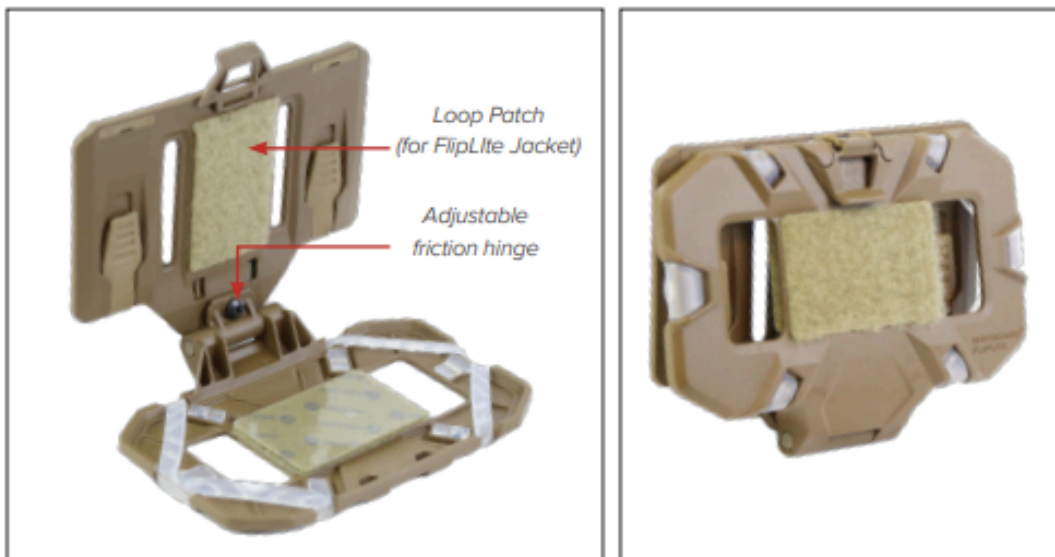

NavBoard® FlipLite™

Accessories available: FlipLite Harness, and FlipLite Jacket

PREPARE FLIPLITE FOR ATTACHING TO CARRIER



1

Push down on bungee lock to release



2

Flip up bungee lock and release. Open FlipLite.



3

Release the two mounting straps. FlipLite is ready for mounting.




PRODUCT NAME:

NavBoard FlipLite

PART NUMBER:
NB-FL02XX


ATTACHING THE FLIPLITE™ TO A PLATEFRAME MODULAR™ (PF-M™)

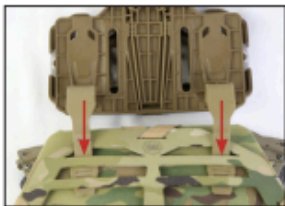

1 Feed the mounting straps through the uppermost slots.



2 Pull the mounting straps through the appropriate window (approximately 3" below the uppermost slots). Fold the FlipLite phone panel down.

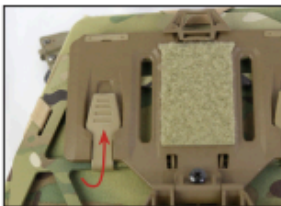

3 Fold the mounting straps up and lock in by pushing down as shown above. Repeat with second strap.



4 Attach Velcro to back of device and pull corner retention straps over device to secure.



5 Fold bottom panel up and pull the closure over the bottom panel. The FlipLite™ is now attached and secured.

ATTACHING ZIPLITE™ TO ADVANCED TACTICAL HARNESS (ATH™)



1 Remove comfort foam. Feed the FlipLite straps through the uppermost slots.



2 Pull tabs through the bottom slots of the ATH™. Fold FlipLite down.



3 Fold the mounting straps up and lock in by pushing down as shown above.



4 Attach Velcro to back of device and pull corner retention straps over device to secure.



5 Fold bottom panel up and pull the closure over the bottom panel. The FlipLite™ is now attached and secured.



OPEN CAMERA TO VIEW
USER INSTRUCTIONS OR VISIT
WWW.SSPGEAR.COM/END-USER-INDSTRUCTIONS