




PRODUCT NAME:

PF-M Cummerbund Install

PACKAGE INCLUDES:

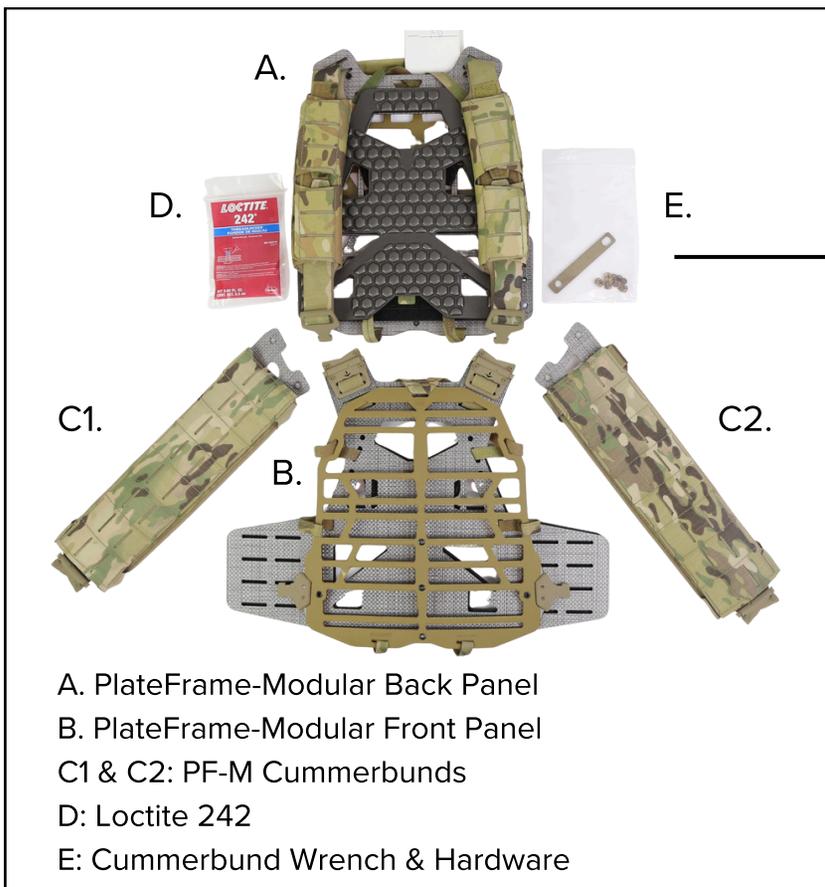


OPEN CAMERA TO VIEW
USER INSTRUCTIONS OR VISIT
WWW.SSPGEAR.COM/END-USER-INDSTRUCTIONS



PRODUCT NAME:

PF-M Cummerbund Install


INSTRUCTIONS:

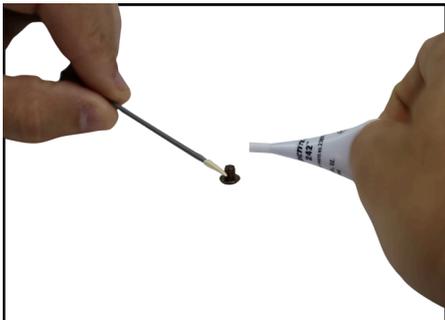

1 Apply Loctite to the top portion of the threads closer to the head



2 Align holes to back panel for proper install of the cummerbund hardware

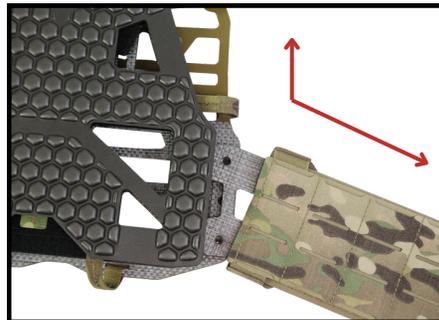

3 Holes are aligned properly when there is an obtuse angle with back panel and cummerbund



4 Binding posts gets placed on the inside of the PF-M



5 Hex screws get placed on opposite side, external of the back frame



6 Utilized the provided spanner wrench to hold binding post in place while you tighten



7 Use a 3/32 hex key to tighten into the binding post while holding spanner wrench



8 Repeat steps 1-7 for the other 3 remaining hex screws and binding posts