



END USER INSTRUCTIONS - READ BEFORE USE

PRODUCT NAME:


NavGear™ 02D2™

PART NUMBER:
O2SC-000X

PACKAGE INCLUDES:



- A. O2D2
- B. Left Mask Buckle Attachment with (2) screws
- C. Right Quick Release Buckle with (2) screws

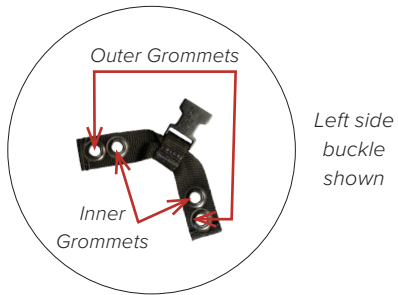

Left side buckle shown

COMPATIBLE MASKS



Airborne Systems
SOLR



Airborne Systems
N.A. (PHAOS)



Carleton Phantom
Mask Assembly

ATTACH GROMMETS TO MASK



1

Align mask buckle attachments with O2D2 side straps.



2

Attach mask buckle attachment to mask. Repeat to other side.



3

Connect quick release clip first. Connect left clip. Adjust the mask using diagram below for a proper fit.



Right side features a quick release buckle



Attach the mask buckles using variations of inner/outer grommets to adjust mask in 15 degree increments.

